

INFO & SETTING WHEEL SIZE ON THE BC1200

FIRST: Remove the display from its backing by twisting it counterclockwise about 1/8 of a turn. Do not undo the small screws – just twist!



The BC 1200 has 2 navigation buttons: The “RESET” one on the top, and The “MODE” button on the bottom.

DIST/DAY
RIDETIME
AVGSPEED
MAXSPEED
STPWATCH
TRIP UP/-DOWN

RESET is used to zero out these functions, (and to set up the displays...)



There are TWO simultaneous displays:

The upper one is always current speed;

The lower one is selected with the MODE key.

MODE
DIST/DAY
RIDETIME
AVGSPEED
MAXSPEED
STPWATCH
TRIP UP/-DOWN
TOTALODO
CLOCK

MODE is used to select what to display on the lower readout (and is used for setup...)

GB USA

| ENGLISH | Functions |
|------------------|------------------|
| DIST/DAY | Trip distance |
| RIDETIME | Ride time |
| AVGSPEED | Average speed |
| MAXSPEED | Maximum speed |
| STPWATCH | Stopwatch |
| TRIP UP/ DOWN | Trip counter |
| TOTALODO | Total distance |
| CLOCK | Clock |
| ⌚ | Wheel size 1/2 |
| LANGUAGE | Language setting |
| km/h, mph | Speed |
| ↕ | Speed comparison |



MODE ↑



The Vortex is shipped calibrated in MPH. You do NOT need to do anything if you are happy with these settings. However, to change the language and/or the MPH/KMH setting (wheel size), **or after changing batteries**, proceed as follows:

- Set language and wheel size ⌚ (WS1)
- Press MODE until TAGES-KM (DIST/DAY) appears on display.
- Press ⌚ (WS1/2) on the back until ⌚ (WS1) appears.
- Press SET on the back for 3 sec. with a pointed tool.

This should cause the “language” to flash.

SIGMA SPORT BC 1200

DEUTSCH
ENGLISH
FRANCAIS
ITALIANO
ESPAÑOL
SVENSK
HOLLANDS

Press the RESET button on the top until the desired language appears.



Press the MODE key to confirm it and move on to the next function – selecting MPH or KMH.



Again, press the RESET (top) button to scroll between options, and press MODE to confirm.

This will bring you to the wheel size input.

MODE ↑



Again, pressing MODE will toggle between digits, and pressing RESET will change the numbers.

2 → 1 → 5 → 5 → set language

Check www.inspeed.com for the correct calibration numbers – should also be in your instruction sheets (also on inspeed.com)
M1 rotor: 0952 (before May '05)
D2 rotor: 0711 (after May '05)

→ 1 → 2 → 3 → 4 ... 0

(It's not as bad as it seems once you get used to it)



To complete the process (once the right numbers are entered), turn the display over and press the SET button with a pointed tool.

Done!

Note that this same process applies to setting the CLOCK: press the MODE button until the Clock appears, then proceed just as described her for WS...

NOTE: THIS IS A REDUCED VERSION OF A MORE COMPLETE SET OF INSTRUCTIONS FOR THE BC1200.

TO LEARN MORE ABOUT THE FUNCTIONS OF THE BC1200, GO TO WWW.INSPEED.COM UNDER THE MANUALS SECTION OF YOUR PRODUCT AND LOOK FOR **SIMPLIFIED INSTRUCTIONS FOR THE BC1200.**

ALSO: FIND MORE ON WWW.SIGMASPORT.COM