



---

10 hudson road ◇ sudbury, ma ◇ 01776 ◇ (978) 397-6813 ◇ www.inspeed.com

June 2009

Setting the Wheel Size ("WS") on a Cateye Velo8 for Inspeed Wind Sensors.

The goal here is to set the WS to 114 for mph/kph or 100 for knots...

- Remove the display from the backing (press the small lever below the display and slide it upward)
- Next, using a ballpoint pen press the MODE button on the front of the display AND the SET button on the back, simultaneously. That should start things flashing.
- Press the MODE button to select MPH or KPH
- Press SET to capture that and move on
- Now press MODE three times until you get to [205]
- Press and HOLD the MODE button until the 5 starts to flash
- Press MODE 9 times until the flashing 5 becomes a 4
- Press and HOLD it again to make the 0 flash
- Press MODE once to make this a 1
- Press and HOLD it again to make the 2 flash
- Press MODE once to make the 2 a 1. The WS should now read [114].
- Press SET on the back to capture this and you are all set!

NOTE: for KNOTS select MPH and set the WS to 100. There is a small error associated with this (about 1%) since the WS should actually be set to 99, but the smallest WS it can take is 100... If you do this, the readout will be in knots, but the units will show mph – just ignore the mph!

Thank you and enjoy.